RPFS ROTA

ROTA PULSE FLOW SENSOR (Slip Insertion Paddlewheel)

FEATURES

- ± 2.5% accuracy @ velocity range 0.5 to 8.5 m/sec.
- ± 1 % accuracy over linear range 0.7 to 7.0 m/sec.
- Repeatability of ±0.6%.
- NPN inductive pulse with internal amplification.
- Square wave output with short circuit protection.
- Inductive coil pulse option for low current applications.
- High Pressure options to 2000kpa
- 50°C or 120°C temperature models.
- Simple installation and maintenance.
- Large range of pipe adapter fittings in sizes 20 to 110mm. (Larger pipe sizes to 500mm using "Long Stem" –LS version)
- Stainless Steel 17-4PH paddlewheel rotor without magnets.
- Australian made since 1984. (Now with new high speed bush).

DESCRIPTION

The Rota Pulse Flow Sensor (RPFS) paddlewheel insertion type flowmeter uses a proven principle of flow measurement, which is used worldwide. The RPFS comes in four model variants:

- RPFS-P for liquids up to 50°C (plug-in cable)
- RPFS-H for liquids up to 120°C
- RPFS-L for liquids up to 120°C (Inductive pulse)
- -LS Long Stem version for pipe diameters 110-350mm (Refer -LD datasheet)

All model variants insert directly into a large range of pipe adapter fittings available in PVC, Galvanized Iron, Brass, Stainless Steel or Polypipe materials, covering pipe sizes 20 to 110mm (standard sizes). This makes the RPFS suitable for a wide range of liquid flow measurement, monitoring and batching applications. Using the BSPB & BSPSS fittings adaption to larger size pipes is possible depending on pipe wall thickness, alternatively the Long Stem (-LS) versions with adaptors are then used.

With only one moving part and limited intrusion into the pipe, and combined with its flow-through design, the RPFS allows accurate measurement of liquid flows with virtually no head losses.

Each of the 4 blades of the rotor (paddlewheel) extends approximately one centimetre into the flowing liquid. The RPFS-P sensor generates a square wave pulse with the frequency output proportional to flow velocity and proportional to pipe diameter. The RPFS-P incorporates internal amplification, allowing pulse transmission up to 1000 metres to the receiver device. The RPFS-P model is specially constructed with a metal shielding jacket making it immune to electrical interference.

Magnets are not used in the RPFS models, thereby eliminating iron particles jamming the rotor. The alloy rotor used also makes the RPFS less susceptible to interference from turbulence and particles hitting the rotor, thereby giving superior flow results.

SPECIFICATIONS

	Models				
	RPFS-P	RPFS-H	RPFS-L		
Supply voltage	5-30VDC	5-30VDC	Inductive coil 260 ohms.		
Output signal	NPN open collector	NPN open collector	Inductive sine wave pulse		
	50% duty cycle pulse	50% duty cycle pulse	50% duty cycle pulse		
Current draw @ 5VDC / 24VDC	2.5mA / 10mA	2.5mA / 10mA	negligible		
Max. switching current	200 Ma (at 24VDC)	200 mA (at 24VDC)	Millivolts for op-amps		
Cable length	5 metres, plug-in cable	2 metres cable (standard)	2 metres cable (standard)		
	3-core (3 wire) M12	2-core shielded (3 wire)			
Fluid temperature	50 °C max.	120 °C max.	120 °C max.		
Weather rating	IP67 IP65 IP6		IP65		
Pressure rating	200psi 400psi 150psi				
Accuracy	± 2.5% for 0.5 to 8.5 m/s, ±1% for 0.7 to 7.0 m/s, Repeatability ± 0.6%				
For Pipe Sizes	15 to 110mm standard, Larger pipes via BSPB-LS special adaptor or saddle clamps. (refer RPFS-LS)				



MANU ELECTRONICS PTY LTD

RPFS_Datasheet 23/02/2018

41 Carter Road, Brookvale NSW 2100 Website: http://www.manuelectronics.com.au

DATASHEET

RPFS-P

______®™ Flow Measurement Products

RPFS-H

Model	RPFS-P	RPFS-H	RPFS-L		
Body	Delron (Acetal)	Brass	Delron		
O-rings x 2	Neoprene	Viton	Neoprene		
Rotor	Stainless Steel 17-4PH				
Bushes	Delron				
Axle	Tungsten Carbide				
Lockcap	PVDF	Brass	PVDF		
Dimensions	130L x 30W mm	150L x 30W mm	135L x 30W mm		
Overall (approx.)					

ORDERING CODES:-

NOTE: All RPFS sensors are supplied with a screw-down LC locking cap

RPFS-P NPN transistor 5-25VDC sinking pulse, liquid temperature to 50°C RPFS-H NPN transistor 5-25VDC sinking pulse, liquid temperature to 120°C Inductive coil pulse signal for amplified	
RPFS-H liquid temperature to 120°C	
Inductive coil pulse signal for amplified	
RPFS-L inputs, liquid temperature to 120°C	I RP

(See page 5, for pipe installation adapter fittings)

APPLICATIONS

Since the RPFS Flow Sensor was first manufactured in 1984, over 30,000+ units are now in use worldwide. They are used in a large variety of applications, including measurement of fresh and recycled water in concrete batch plants, measurement of water irrigation, salt water, chlorinated water and countless other low viscosity liquid measurement processes (Note: is not suitable for pulsating flows).

RPFS-P and RPFS-H sensors can be connected direct to PLCs, ManuFlo ME995 preset batch controllers or FRT303-D/A Flowrate/Totalisers, or just about any other process controller/indicator device (up to 1000m away –use shielded cable).

The ManuFlo <u>UIC</u> **universal pulse scaler card** allows conversion of the output pulse to individual requirements – scaling for example to 1p/1ltr. ideal for PLC inputs of DC NPN/PNP or AC 'triac' types. Pulses can be scaled down or factored to a desired engineering unit, to cater for slow counting PLCs.

The RPFS-L inductive coil sensors are energy misers suitable for low current requirements and are ideal for battery powered applications using FRT303-B or ME5-B or other battery powered Indicators (up to 150m away).

RPFS-type flow sensors are designed to operate with ManuFlo equipment (our equipment has internal pull-up resistors at the inputs). If using an RPFS with non-ManuFlo equipment and pulses are not being detected, then fit a resistor of value 1.5K - 3.3K across the Pulse and (+) positive input to act as pull-up resistor (the exact resistor value should be determined by the current draw to suit your equipment).

SPARE PARTS:-

Order Code	Order Code Description		Order Code	Description		
PW-N	Paddlewheel, with bush	X	PC5	5 metres M12 Plug-in cable for RPFS-P	0	
PWAH	Axle for paddlewheel	1	PC10	10 metres		
BS020	Neoprene O-ring	0	PC15	15 metres		
LC	Locking Cap					

41 Carter Road, Brookvale NSW 2100 Website: http://www.manuelectronics.com.au

INSTALLATION GUIDE

Adapter Tee keyway fittings are available in:


- 1. PVC Class 18 Cat. 19 Slip tees (F-glue-ends) pressure pipe Sizes: 20, 25, 32, 40, 50, 65, 80 & 100 mm.
- PVC high pressure saddle clamps: 40, 50, 80 and 100mm. 2. Galvanized Iron threaded connections:
- BSP (F): pipe sizes 25, 32, 40 & 50 mm; BSP (M) pipe sizes 80 & 100mm.
- 3. Gunmetal BSP(m) threaded connection end pipe tube tees 20 mm.
- 4. Polypipe saddle clamps in pipe sizes 40, 50, 63, 75, 90, 110 mm
- 5. PVC saddles 40, 50, 80 and 100mm.
- 6. Stainless steel 25, 32, 40 & 50mm, larger sizes fabricated on request.
- 7. FOR PIPE SIZES 110mm and larger refer to the RPFS-LS model

**Further custom made fittings are available on request.

Use ManuFlo BSPB, BSPB-LS (Long Stem) Brass or BSPSS Stainless Steel pipe adapter keyway nipple - with locknut, which has a 1" OD BSP thread for screwed insertion into 1"(female BSP) half-sockets which can be welded directly to pipe, the BSPB fittings can be coupled to any 1" BSP female entries including saddle clamps.

Installation Conditions

- **IMPORTANT:** A minimum of 10x pipe diameter before (upstream of) the • sensor and at least 5x pipe diameter after sensor of straight pipe section must be fitted, with no bends, reductions, enlargements, restrictions, valves etc within this section. This will help eliminate flow turbulence to ensure optimum accuracy performance.
- The RPFS sensor must measure in a full pipe flow section.
- Can be installed in a horizontal, inclined or vertical pipe position. (Note: If mounted in horizontal or inclined pipe, make sure insertion position of sensor is at top or 45° from top, not on

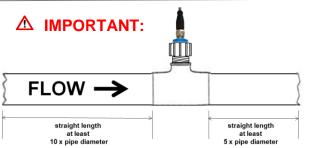

Selection of pipe diameter:

(For best results, use the table below):				Browi (5-30 VDC	(5-30 VDC)			
Pipe size	Flowrange (,	Pulses/Litre	(5-30 VDC) looking at plug on	looking at socket on		
(mm)	Min	Max	(approx.) ⁽¹⁾⁽²⁾		<u>RPFS-P sensor</u>	RPFS-P cable		
20	13	160	116	RPFS-H [#]	White = Pulse			
25	20	250	75	KF1 3-11	Red = $+5-30$ VDC			
32	30	410	46		Shield = O.V. ground			
40	50	640	30	RPFS-L				
50	90	1000	20		U (the other side of inductive	coil) 了 Polarised	
63	132	1580	11.7		Shield = connect to signal/ground			
65	120	1690	12					
75	180	2250	8.3	# If connecting to non-ManuFlo equipment, a 2K2 pull-up resistor may be required between (+) and Pulse.				
80	190	2560	7.3					
90	244	3240	5.7	For extra cable length, use shielded cable only! WARNING: To avoid electrical interference the RPFS-H and RPFS- should not be installed within 30cm of any AC fields, otherwise 50Hz				
100	300	4005	4.6					
110 (-LS)	343	4845	3.8				vise 50Hz	
125 (-LS)	426	6255	3.0	could be det	ected and create oscillatio	ns.		
140 (-LS)	516	7850	2.4	(1) For >315	imm diameter pipes:			
150 (-LS)	600	9010	2	Pulses per Litre = $50273 / [(Pipe diameter in mm)^{2.016}]$				
160 (-LS)	650	10200	1.8					
195 (-LS)	900	15200	1.22	 (2) NOTE: Due to gravitational forces, the pulse output value can diff up to 6% between a vertical flow that is upwards or downwards. When 				
200 (-LS)	950	16000	1.16		form a calbration check to			
250 (-LS)	1480	25000	0.7		er and flow conditions. Onc		will give linear	
280 (-LS)	1850	31400	0.6	and repeatal	ole results within the flow r	ange		
315 (-LS)	2280	39720	0.46					

Flow Measurement Products

MANU ELECTRONICS PTY LTD

FIG.1 PVC holding cap (hand tighten only) RPFS or MRTU6 Flow Sensor E 8 E 24mm diameter 80 **BSPB** Adapter Nipple with locating key 1" BSP (M) parallel thread Lock Nut 58 mm Welded 1" BSP

Socket x 20mm

Customer Pipe or ManuFlo

Supplied Pipe Adaptor

Insertion of the adaptor pipe nipple should intrude Approx. <u>10mm</u> past the curvature of the pipe (to obtain optimum results).

l t	the underside).							
	ELECTRICAL INSTALLATION/DATA Cable connection:							
	RPFS-P [#] Black = Pulse Brown = + 5-30 VDC Blue = O.V. ground/shield							
	Black (Pulse) Blue (Ground) Black (Pulse) Black (Pulse) Black (Pulse) Black (Pulse) Black (Pulse) Black (Pulse) Black							
)	Brown (5-30 VDC) (5-30 VDC) looking at plug on socket on <u>RPFS-P sensor</u> <u>RPFS-P cable</u>							
	RPFS-H[#] White = Pulse Red = + 5-30 VDC Shield = O.V. ground/shield							
	RPFS-L White = Signal 1 (from one side of inductive coil) none Red = Signal 2 (from the other side of inductive coil) Polarised Shield = connect to signal/ground							
	# If connecting to non-ManuFlo equipment, a 2K2 pull-up resistor may be required between (+) and Pulse.							
	For extra cable length, use shielded cable only!							
	WARNING: To avoid electrical interference the RPFS-H and RPFS-L should not be installed within 30cm of any AC fields, otherwise 50Hz could be detected and create oscillations.							
	(1) For >315mm diameter pipes: Pulses per Litre = 50273 / [(Pipe diameter in mm) ^{2.016}]							
	 (2) NOTE: Due to gravitational forces, the pulse output value can differ up to 6% between a vertical flow that is upwards or downwards. Where possible, perform a calbration check to determine pulse rate given the pipe diameter and flow conditions. Once calibrated, meter will give linear 							



Installing Into Existing Pipe Lines

MAINTENANCE

Recommended Periodic Checks:

With clean liquids, sensor check of the paddle wheel is recommended once every year. In applications with reclaimed or contaminated fluids, regular quarterly maintenance checks are recommended.

Removal of RPFS from Pipe adaptor Fitting 'Square' Keyway Type Nipple Adaptor:(see FIG 5)


- 1 Unscrew the black PVC locking cap (anti-clockwise).
- 2 Place a small to medium sized flat thin bladed screwdriver in the join where the insertion sensor body meets the nipple adaptor (See FIG 4), twist the screw driver to prize the two apart till the slots clear the keyways, then pull or twist upwards until the sensor is released (never pull via the cable).

Removal of RPFS from Pipe adaptor Fitting 'Triangular' Keyway Type Nipple Adaptor: (see FIG 6)

- 1 Unscrew the black PVC locking cap (anti-clockwise).
- 2 Hold the neck of the Tee piece in your left hand, grasp the RPFS body with your right hand and turn slowly anti-clockwise until the sensor hydraulically raises out of slot then pull upwards out of the socket (never by the cable).

**When returning the sensor to nipple adaptor insert so the keyway and slots line up then then push down until they locate. Screw the black locking cap clockwise to hold the sensor in place (hand tightened only).

FIG 6

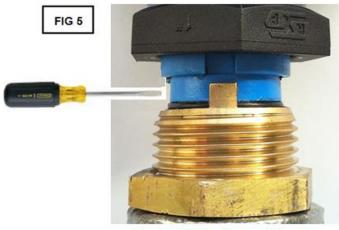

Standard fitting 'Square' Keyway



New 'Triangular' turn replace fitting

Cleaning:

- 1 If the paddlewheel (rotor) and or sensor body is coated with scale, immerse the sensor section in diluted hydrochloric acid, scour gently if required.
- 2 For ease of removal or refitting of sensor we strongly recommend to lubricate the body O-rings using petroleum jelly.
- 3 If the paddlewheel requires servicing, push out the axle using a small hole punch or similar implement, remove the paddle wheel and service or replace rotor and/or axle as required (spare parts available from ManuFlo).

Fault Diagnosis & Rectification:

- If the RPFS sensor ceases to count, the paddlewheel may be blocked, remove inspect and clean as described above.
- If the RPFS pulses when there is no flow, a nearby 50Hz AC field is probably causing these false counts. Move the flow sensor away from the 50Hz field, or move the source of the field if practical.
- If the standard cable length supplied is not sufficient and needs extending contact ManuFlo for suitable 'screened' cable and never run extended cable across or near to other cables that are potential EMF sources.



MANU ELECTRONICS PTY LTD

ORDER CODES FOR PIPE ADAPTOR FITTINGS

Material Type For 20 mm 25 mm 32 mm 40 mm 50 mm	GAL T-Piece Gal pipe GAL25 (-T2) GAL32 GAL40	PVC slip T-piece Pressure pipe PVC20 PVC25	PVC Saddle Clamp Pressure pipe	Polypropylene Saddle Clamp Pressure pipe	Polypropylene Saddle Clamp	STAINLESS T-Piece	BRASS T-piece	BRASS Socket
For 20 mm 25 mm 32 mm 40 mm 50 mm	Gal pipe GAL25 (-T2) GAL32	Pressure pipe PVC20		Saddle Clamp	Saddle Clamp	T-Piece	T-piece	Socket
20 mm 25 mm 32 mm 40 mm 50 mm	GAL25 (-T2) GAL32	PVC20	Pressure pipe	Dragouro nino				
25 mm 32 mm 40 mm 50 mm	GAL32			Pressure pipe	Poly Pipe Black	S/Steel pipe	Brass pipe	
32 mm 40 mm 50 mm	GAL32	D\/C25		-		-	BRA20	
40 mm 50 mm		1 0025				SS25	BRA25	
50 mm	GAL40	PVC32				SS32		BSOC:
	0/12/10	PVC40	PVC40SC	SCP40	SC40	SS40		1" BSP
	GAL50	PVC50	PVC50SC	SCP50	SC50	SS50		Brass pipe socket
63 mm				SCPE63	SC63			adaptor
65 mm		PVC65		SCP65	SC75			for
75 mm	0.41.00	51/000	51/00000	00500	SC75			25-100mm
80 mm	GAL80	PVC80	PVC80SC	SCP80	SC90			pipes also
80 mm	GAL80-F (Table D flanged)							BSPB &
90 mm	(Table D hanged)			SCPE90	SC90			BSPSS
100 mm	GAL100	PVC100	PVC100SC	SCP100	SC114			nipple
100 mm	GAL100-F							adaptor
100 11111	(Table D flanged)							
110 mm				SCPE110	SC110			
125 mm				SCPE125-LS	SC125-LS			BSOC:
140 mm				001 2120 20	SC140-LS			1" BSP
140 mm			PVC150SC-LS	SCP150-LS	SC140-LS			Brass pipe socket
			FVC1505C-L5					adaptor
160 mm				SCPE160-LS	SC160-LS			for
200 mm			PVC200SC-LS	SCP200-LS	SC200-LS			100-500
225 mm				SCPE225-LS	SC225-LS			mm pipes also
250 mm				SCP250-LS	SC250-LS			BSPB-LS
280 mm					SC280-LS			Long Stem
300 mm			PVC300SC-LS	SCPE300-LS	SC315-LS			nipple
315 mm					SC315-LS			adaptor
500 mm								
	â		0					
	Galvanised iron threaded ends BSP (female) 2000 kPa Note: 25mm can be supplied	PVC T-piece Class 18 Cat 19 Glue-in (female) 1100 kPa	PVC 1400 kPa	PVC ≤ 150mm: 1600 kPa	Poly-pipe agricultural Saddle Clamps ≤ 150mm: 1600 kPa	Stainless Steel 316 T-piece. BSP (female)	Brass T-piece BSP (female)	1" BSP Brass pipe socket adaptor & BSPB
	with straight pipe sections already fitted (Part GAL25-T2)			> 150mm: 1000 kPa	> 150mm: 1000 kPa	threaded entry 2000 kPa	threaded entry 2000 kPa	BSPB-LS BSPSS nipple adaptors (see Fig 1
GAL80 - 80mm Galvanized Iron pipe adapter (80mm \u03c6 x 600mm long) GAL80 - 80mm Galvanized Iron pipe adapter								

Due to continuous product improvement, specifications are subject to change without notice.

** Pipe fitting options for the RPFS are as per the table however other fitting types may also be available on request**



Page 5



41 Carter Road, Brookvale NSW 2100 Website: http://www.manuelectronics.com.au

RPFS Datasheet 01/05/2017

RPFS

NOTES:

USES: Connect to your PLC or own devices or with ManuFlo devices.



