


1. Disconnect the wires from the old MRP board. (Be careful not to damage the wires).

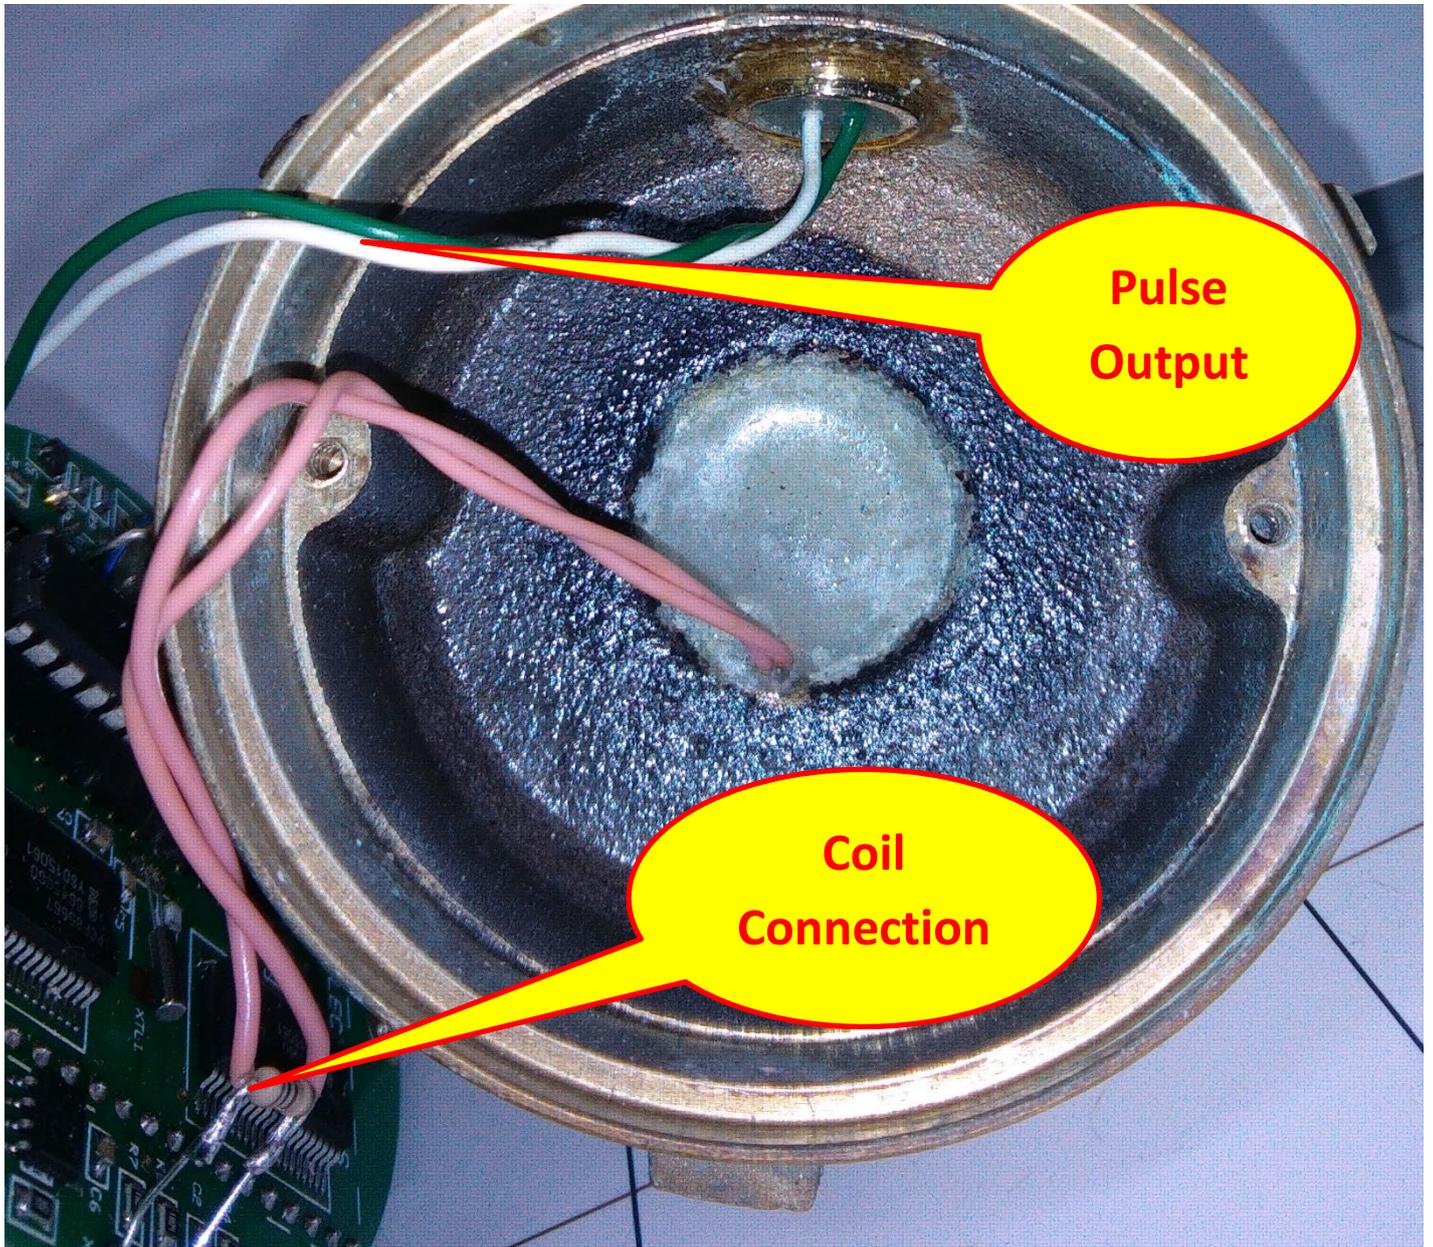


2. Solder the 2pin (Female) connectors provided on both sets of wires coming from the *Coil* and *Pulse output*.



3. Connect the Wires from the body to MRP PCB as described below:

A. Coil Connection: To V+ & V- (None polarised).

**B. Pulse output: Blue/Green Wire to negative
Black/White Wire to Positive**

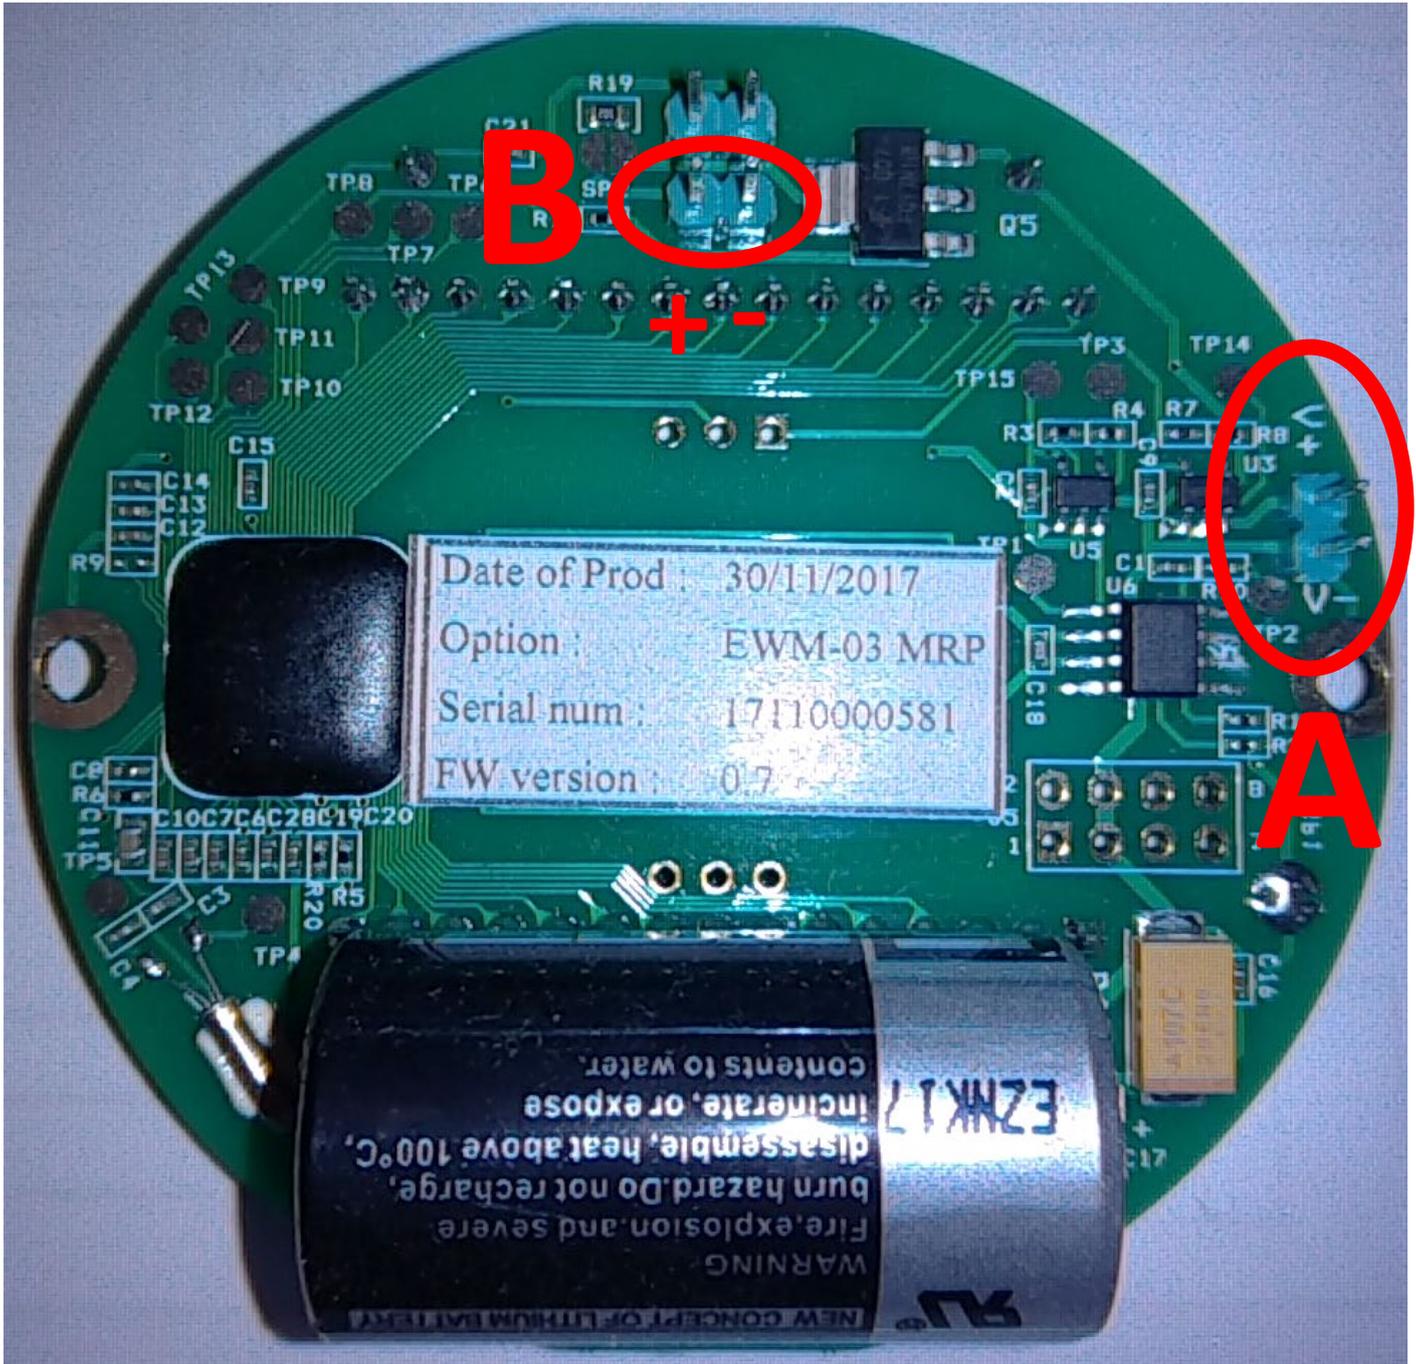

MRPU4/6 PCB Bottom layer