


MRP20-T2 Calibration (Old PCB)

- MRP20 can be mounted at any angle.
- Factory calibrated to either vertical (default) or horizontal mount (specify when ordering).
- If mounting contrary to factory set calibration, can change calibration setting:
 - Turn metal locking ring anticlockwise to remove, and remove tempered glass window.
 - Adjust 3 calibration pots marked HTU (Hundreds, Tens, Units)

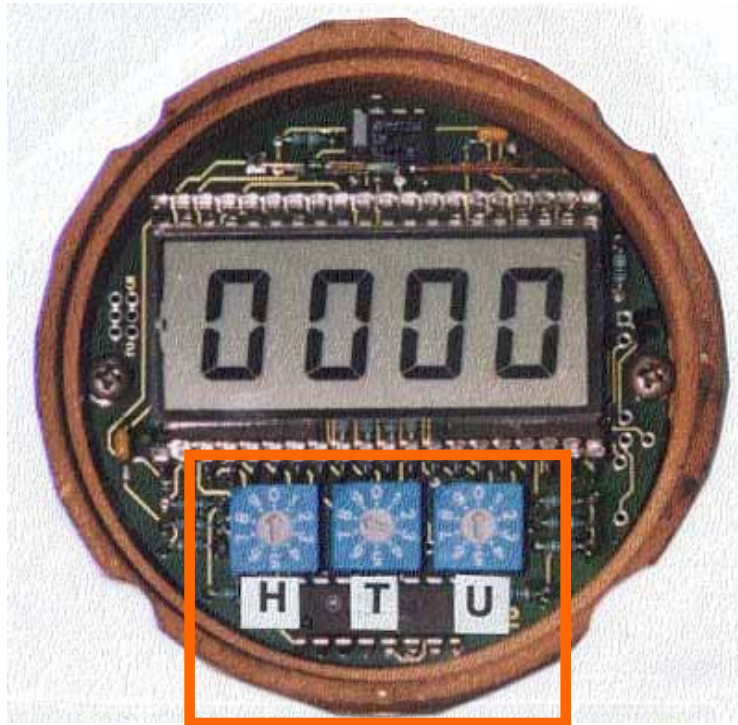

Final Calibration:

- If the liquid collected is **more** than pulse value shown on LCD display, then **decrease** the rotary decade set value by the same % difference.
- If the liquid collected is **less** than pulse value shown on LCD display, then **increase** the rotary decade set value by the same % difference.

For calibration, use at least a 30L vessel at a flowrate above 20 Litres/min.